


## Text Anywhere Firmware Update Procedure

The Updater software will update your Text Anywhere to the latest versions of firmware and webpages.

1. Download latest firmware updater zip file from <http://textanywhere.ca/support/downloads> located under 'Firmware'
2. Extract file onto desktop
3. Connect your Text Anywhere via Wi-Fi to the laptop or PC.
4. Run 'TextAnywhereUpdater.exe'

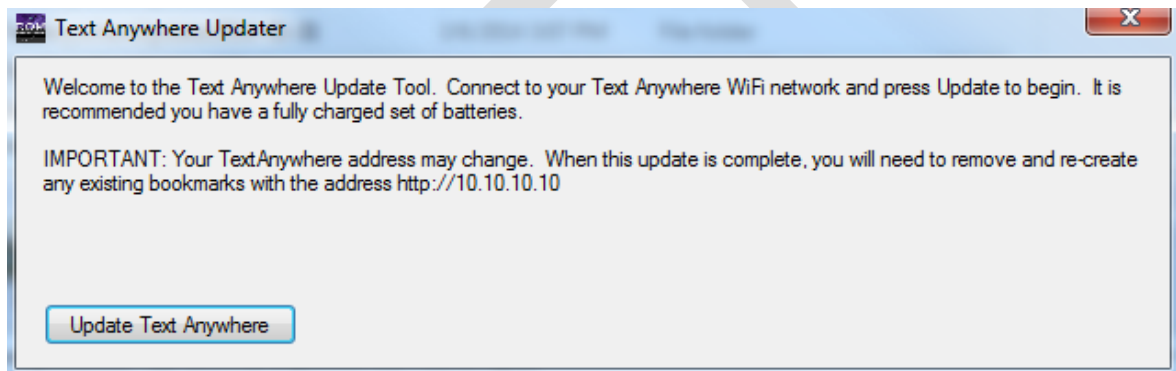

5. Click the 'Update Text Anywhere' button.
  - a. Updater will upload the latest versions of Firmware and Webpages to the Text Anywhere.
6. Text Anywhere will reboot.
  - a. Note: Older versions of Text Anywhere used 169.254.x.x address for the webpages. New versions use 10.10.10.10.
7. Close the updater.
8. Reconnect to Text Anywhere and test operations.